

Vintage Sardine Can

(Cat Scratcher House)

Products: SetCoat® Metallic (True Silver), Layering Paint™ (Coal, Berry & Mustard) Designer Rust™ Kit, Stain&Seal™ (American Walnut) StencilFx™ (Sardine Can Sign Set), Stencil Spray Adhesive
24"x16.5" sheet of 1/4" Plywood

Tools: Brushes, Cheesecloth, Jig Saw, Paint Roller, Cheesecloth, Sand paper

- step 1. Trace the pattern onto 1/4" plywood
- step 2. Cutout using jigsaw
- step 3. Paint base layer with SetCoat® Metallic (True Silver) apply 2 coats

Allow to dry 4 hours

- step 4. Using spray adhesive, adhere first stencil. Using Layering Paint™ (Berry and Mustard) mix an orange/red and apply through the stencil

Allow to dry 2 hours

- step 5. Using spray adhesive, adhere second stencil. Apply Layering Paint™ (Mustard) through the stencil

Allow to dry 2 hours

- step 6. Using spray adhesive, adhere third stencil. Apply Layering Paint™ (Coal) through the stencil


Allow to dry overnight

- step 7. Gently sand through layers to create age and wear
- step 8. Use dampened cheesecloth to rub through areas to distress

- step 9. Use the Designer Rust™ Kit to add natural looking rust
- step 10. Use cheesecloth to apply water thinned Stain&Seal® (American Walnut)

How to build the Scratcher Box (other side)



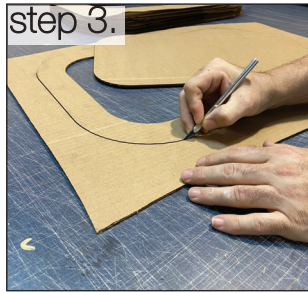

Vintage Sardine Can

(Cat Scratcher House)

Products: Elmers® glue, Cardboard

Tools: Small Paint roller, Razor Knife/Box Cutter

How to build the Scratcher Box

step 1. Gather 100 sheets of cardboard (24"x16.5" or larger)

step 2. Trace the patterns onto the cardboard

step 3. Cut out the layers (cut 3 solid layers for the back)

step 4. Using Elmers® glue and a small roller. Glue the layers together and weigh it down

Allow to dry

step 5. Use Elmers® glue to adhere the face to the scratcher box and weigh down again

Allow to dry

