


step 1.



step 2.



step 3.

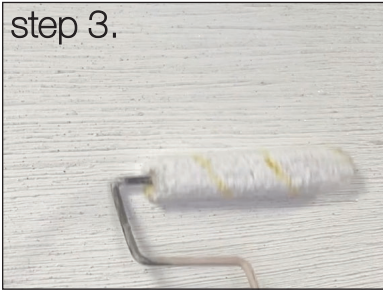

WallSilk™ Basic Application

Products: WallSilk™, ShimmerCoat™

Tools: 3/8" nap roller, WallSilk Tools (14" 8" & 4")

step 1. Using a 3/8" roller apply an even and generous coat of WallSilk™.

step 2. Drag WallSilk Tool™ vertically or horizontally through the WallSilk™. Allow to dry for 24 hours.

step 3. Roll on a generous coat of ShimmerCoat™ to add shimmer and to protect

Tips: Always make a sample to ensure the desired result.

Hand mix before each use.

Use the smaller tools to finish around windows and doors.

Press a layer of plastic into can before replacing lid to keep unused product from crusting over.



2700 Industrial Avenue Two, Fort Pierce, Florida 34946
800-270-8871 • www.fauxfx.com
©2020 Faux Effects International, Inc. All Rights Reserved

